

S563



ADL 系列外置互感器导轨式多功能电能表
ADL Series DIN-Rail Mounted Multifunctional
Electric Energy Meter With External Current
Transformer

安装使用说明书
Installation and Operation Instructions

安科瑞电气股份有限公司

Acrel Electric Co., Ltd.

申明

Statement

版权所有，未经本公司之书面许可，此手册中任何段落、章节内容均不得摘抄、拷贝或以任何形式复制、传播，否则一切后果由违者自负。

All rights reserved. Without the written permission of the Company, any paragraph or section of this manual shall not be extracted, copied or reproduced or distributed in any form. Otherwise, all consequences shall be borne by the violator.

本公司保留一切法律权利。

The Company reserves all legal rights.

本公司保留对本手册所描述之产品规格进行修改的权利，恕不另行通知。订货前，请垂询当地代理商以获悉本产品的当前规格。

Our Company reserves the right to modify the product specifications described in this manual without further notice. Please consult your local agent for the current specifications of this product before placing an order.

安全信息

safe Information

这份手册并未包含操作设备（模块、设备）的所有安全措施，因为特殊的操作条件、当地的法规要求或规定可能需要采取进一步的措施。然而，它包含了一些必须阅读的信息，这些信息关系到您的人身安全和避免物质损害。这些信息通过一个警告三角形来强调，并根据潜在危险的程度如下表示。

This manual does not contain all of the safety measures for operation of the equipment(module, device),because special operating conditions, and local code requirements or regulations may necessitate further measures. However,it does contain information which must be read for your personal safety and to avoid material damages. This information is highlighted by a warning triangle and is represented as follows, depending on the degree of potential danger.



“危险”表示一种危险的情况，如果不加以避免，将导致死亡或重伤。

不遵循这些说明将导致死亡或重伤。

DANGER indicates a hazardous situation which, if not avoided, will result indeath or serious injury.

Failure to follow these instructions will result in death or serious injury.



“警告”表示一种危险的情况，如果不加以避免，可能导致死亡或重伤。

WARNING indicates a hazardous situation which, if not avoided, could resultin death or serious injury.



“小心”表示一种危险的情况，如果不加以避免，可能导致轻度或中度伤害。

CAUTION indicates a hazardous situation which, if not avoided, could result inminor or moderate iniury.

目 录

Contents

1 概述	1
1 Overview	1
2 型号说明	1
2 Description of Model	1
3 功能列表	1
3 List of Functions	1
4 技术参数	2
4 Technical Parameters	2
5 外形尺寸	5
5 Overall Dimensions	5
6 安全措施	6
6 safety measures	6
7 接线与安装	7
7 Connection and Installation	7
8 主要功能特点	8
8 Main Functional Features	8
9 显示	9
9 Display	9
10 通信说明	9
10 Communication Instructions	9
11 常见故障分析	17
11 Common Fault Analysis	17
12 运输与贮存	18
12 Transportation and Storage	18
13. 保修与服务	18
13. Warranty and Service	18

1 概述

1 Overview

ADL 系列外置互感器导轨式多功能电能表，是主要针对于光伏并网系统、微逆系统、储能系统、交流耦合系统等新能源发电系统而设计的一款智能仪表，产品具有精度高、体积小、响应速度快、安装方便等优点。具有对电力参数进行采样计量和监测，逆变器或者能量管理系统（EMS）与之进行通讯，根据实时功率及累计电能实现防逆流、调节发电量、电池充放电等功能，可双向计量，实现户用分布式光伏能量管理。

ADL series DIN-rail mounted multifunctional electric energy meter with external current transformer is an intelligent instrument mainly designed for new energy power generation systems such as photovoltaic grid-connected system, micro inverter system, energy storage system, AC coupling system, etc. The product has the advantages of high precision, small volume, high respondent speed and convenient installation. The product has the features of sampling, metering and monitoring power parameters, communicating with an inverter or an energy management system (EMS), realizing the functions of preventing reverse flow, regulating power generation, charging and discharging batteries according to real-time power and accumulated electric energy, and realizing bidirectional metering and household distributed photovoltaic energy management.

2 型号说明

2 Description of Model

型号 Model	名称 Name
ADL200N	单相 1 个或 2 个 CT 接口电表 Single-phase 1 CT or 2 CT Port meter
ADL400N	三相 1 个或 2 个 CT 接口电表 Three-phase 1 CT or 2 CT Port meter
ADL200N-CT/D16-1	单相 1 个 CT 接口电表 + 1 组单相 CT Single-phase 1 CT Port meter + 1 Single-phase CT
ADL200N-CT/D16-2	单相 2 个 CT 接口电表 + 2 组单相 CT Single-phase 2 CT Port meter + 2 Single-phase CT
ADL400N-CT/D16-1	三相 1 个 CT 接口电表 + 1 组三相 CT Three-phase 1 CT Port meter + 1 Three-phase CT
ADL400N-CT/D16-2	三相 2 个 CT 接口电表 + 2 组三相 CT Three-phase 2 CT Port meter + 2 Three-phase CT

3 功能列表

3 List of Functions

表 1 功能说明列表
Table 1 List of Function Descriptions

功能	功能说明
----	------

Function	Descriptions
电能计量 Electric energy metering	有功电能计量（正、反向） Active energy metering (forward and reverse)
	无功电能计量（正、反向） Reactive energy metering (forward and reverse)
	分相电能 Split-phase energy
电量测量 Electric quantity measurement	U, I
	P, Q, S, PF, F
LCD 显示 LCD display	段式 LCD 显示 Segmented LCD display
按键编程 Key programming	按键可编程通信、变比等参数 ommunication, transformation ratio and other parameters can be programmable by the key
脉冲输出 Pulse output	有功脉冲输出 Active pulse output
LED 报警 LED alarm	运行指示 Operation instructions
通讯 Communication	RS485 接口，支持 Modbus RTU 规约 RS485: Modbus RTU

4 技术参数

4 Technical Parameters

表 2 技术参数说明

Table 2 Description of Technical Parameters

项目 Item		性能参数 Performance Parameters	
型号系列 Model Series		ADL200N ADL200N-CT/D16-1 ADL200N-CT/D16-2	ADL400N ADL400N-CT/D16-1 ADL400N-CT/D16-2
测量 Measurement	网络 Grid	单相 Single-phase	三相四线 Three-phase four-wire
	额定电压 Rated voltage	230V	三相: 3×230/400V Three-phase: 3×230/400V
	输入范围 Input Range	±20%	
	过负荷 Overload	1.2 倍额定值（连续） 1.2 times rating (continuous) 2 倍额定值持续 1 秒 2 times the rating for 1 second	
	功耗 Power consumption	<0.2VA	

	Current 电流	精度等级 Accuracy class	误差±0.5% Error ±0.5%
		输入电流 Input current	120A
		过负荷 Overload	1.2 倍额定值（连续） 1.2 times rating (continuous) 2 倍额定值持续 1 秒 2 times the rating for 1 second
		功耗 Power consumption	<0.2VA
		精度等级 Accuracy class	误差±0.5% Error ±0.5%
	功率 Power		有功、无功、视在功率，误差±0.5% Active, reactive, apparent power, error ±0.5%
	电网频率 Grid frequency		45~65Hz，误差±0.5% 45~65Hz, error ±0.5%
	响应速率 Response rate	≤100ms（电压、电流、功率） ≤100ms (voltage, current, power)	
		≤1s（电能） ≤1s (electrical energy)	
		测量类别 Measurement category	
	过电压等级 overvoltage level		CAT III OVC III
Metering 计量	电能 Electric energy		有功电能：B 级(开口式互感器) Active energy : Class B (split current transformer) 无功电能（准确度等级 2 级） Reactive energy (Class 2 accuracy)
electromagnetic compatibility 电磁兼容	E2		
Security 安全性	工频耐压 Power frequency withstand voltage		通信与信号输入之间 AC3kV 1min Between communication and signal input, AC3kV 1min
	绝缘电阻 Insulation resistance		输入、输出端对机壳>100MΩ Input and output terminals to casing >100MΩ
Communication 通信	接口与通信规约 Interface and communication protocol		RS485 口、Modbus RTU 规约 RS485 interface and Modbus RTU protocol
	通信地址范围 Communication address range		Modbus RTU:1~ 247;
	波特率 Baud rate		支持 1200bps-38400bps Support 1200bps-38400bps
Environment 环境	工作温度 Operating temperature		-40℃~+70℃

	储存温度 Storage temperature	-40℃~+70℃
	相对湿度 Relative humidity	≤95%（无凝露） ≤95% (without condensation) 不适用潮湿环境 "Not suitable for damp environments"
	海拔高度 Altitude	≤2000m
参考标准 reference standard	EN IEC 61010-1:2010 Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements EN IEC 61010-2-030:2010 Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 2-030: Particular requirements for equipment having testing or measuring circuits EN IEC 61326-1:2021 Electrical equipment for measurement, control, and laboratory use - EMC requirements - Part 1: General requirements EN IEC 61326-2-1:2021 Electrical equipment for measurement, control, and laboratory use - EMC requirements - Part 2-1: Particular requirements for electromagnetic compatibility testing for electrical equipment for measurement, control, and laboratory use EN 50470-3 Electricity metering equipment (a.c.) - Part 3: Particular requirements - Static meters for active energy (class indexes A, B and C)	
IP 等级 IP rating	IP51（必须安装在合适的 IP 防护等级外壳中） IP51（Must be installed in a suitable IP rated enclosure）	
污染等级 Pollution Degree	II	
UC 等级 UC Degree	III	
Installation environment	室内 Indoor use	
保护等级 Protect Degree	II（双重绝缘） Class II (Double Insulation)	
使用环境 usage environment	柜内安装(外壳不可触及) Cabinet mounted(The outer shell cannot be touched)	
机械等级 usage environment	M1	


互感器安全特性 Transformer Safety characteristics	绝缘电阻：常态时大于 1000MΩ； Insulation resistance: greater than 1000 MΩ under normal conditions; 抗电强度：可承受工频 4000V 50Hz/1 分钟； Electric strength resistance: It can withstand 4000V, 50Hz power frequency for 1 minute; 阻燃性：符合 UL94-V₀ 级 Flame retardancy: Conforms to UL94-V0 level;
---	--

5 外形尺寸

5 Overall Dimensions

5.1 仪表尺寸（单位：mm）

5.1 Instrument Dimensions (Unit:mm)

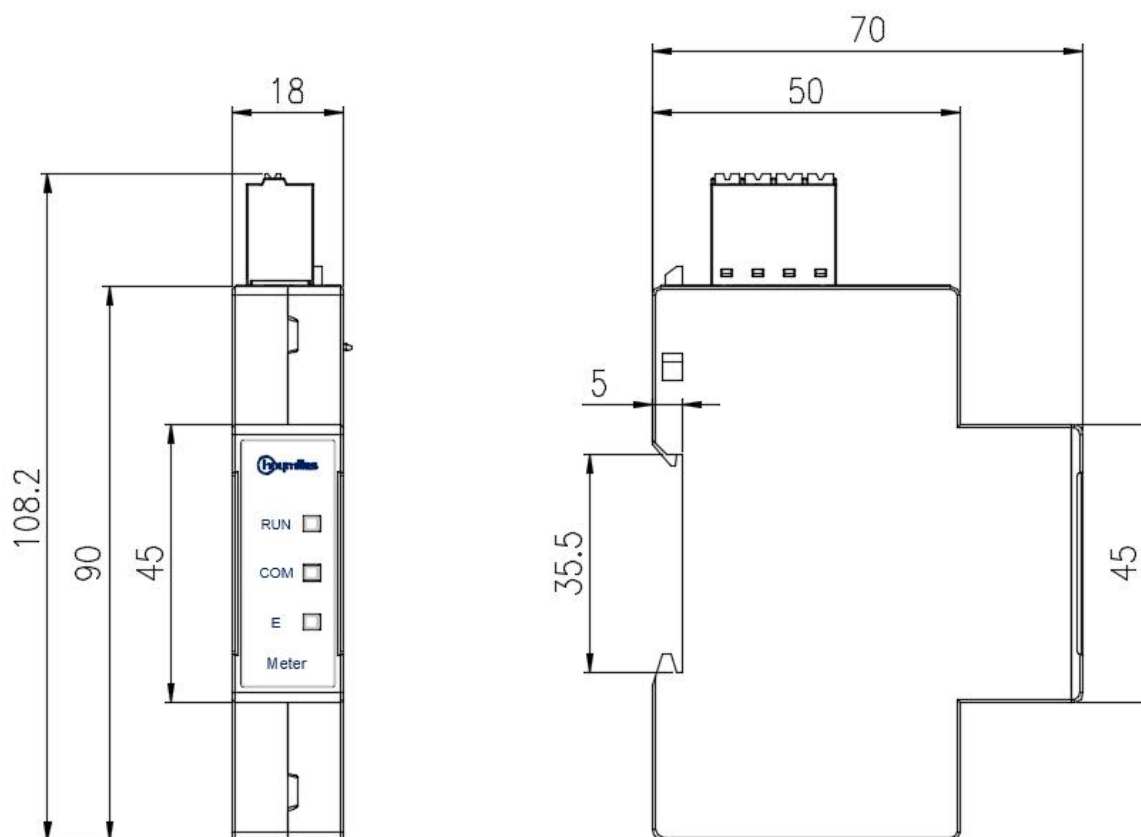


注：尺寸的公差为 1mm。

Note: The tolerance of the dimensions is 1mm.

5.2 互感器尺寸（单位：mm）

5.2 Transducer Dimensions (Unit:mm)

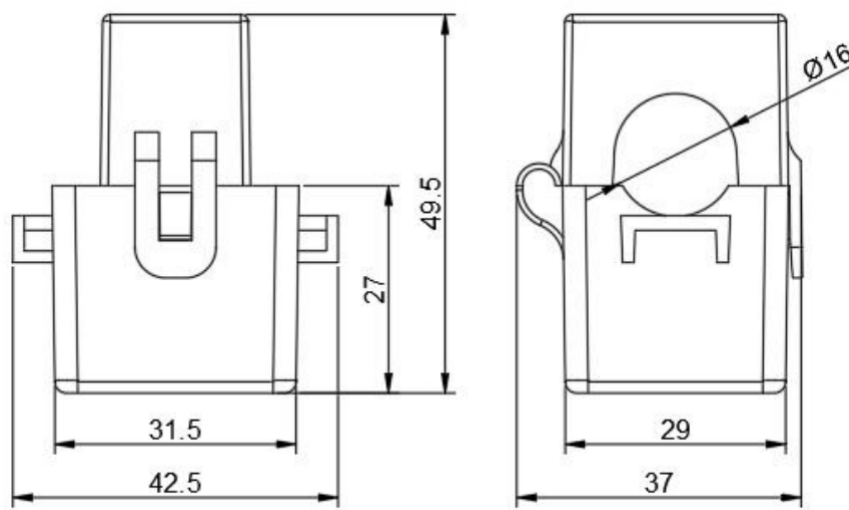

注：互感器引线段中黄色接 A 相，绿色接 B 相，红色接 C 相。

Note: In the lead wire section of the current transformer, the yellow wire is connected to Phase A, the green wire is connected to Phase B, and the red wire is connected to Phase C.

6 安全措施

6 safety measures

电击、爆炸以及弧光的危险

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- 请穿戴好人员保护设备 (PPE)，并遵守电气操作安全规程。
- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- 本产品在使用前不需要试运行。
- This equipment does not require commission before use.
- 开始在本设备上工作之前，请先关闭本设备及安装有本设备的设备的所有电源。
- Turn off all power supplying this device and the equipment in which it is installed before working on it.
- 务必使用额定电压值正确的电压感应设备，以确认所有电源均已关闭。
- Always use a properly rated voltage sensing device to confirm that all power is off.
- 切勿超过设备的最高限值。
- Do not exceed the device's ratings for maximum limits.
- 某些关键控制或保护应用中的人身或设备安全依赖于控制电路运行，请勿将此设备用于此等目的。
- Do not use this device for critical control or protection applications where human or equipment safety relies on the operation of the control circuit.
- 请勿使用水或任何液体材料清洁产品。使用清洁布清除污垢。
- Do not use water or any liquid material to clean the product. Use a cleaning cloth to remove dirt.

• 安装人员负责协调电源侧过流保护装置的额定值和特性与最大额定电流。 若违反这些指令将导致死亡或严重伤害。

• The installer is responsible for co-ordinating the rating and the characteristics of the supply side overcurrent protection devices with the maximum current rating. Failure to follow these instructions will result in death or serious injury.



• 这是安全警示标志，提醒注意潜在的人身伤害危险。当看到此标志时需查阅使用手册。


• This is the safety alert symbol. It is used to alert you to potential personal injury hazards. When seeing this symbol, it is necessary to consult the manual.

7 接线与安装

7 Connection and Installation

7.1 电压电流接线示意图

7.1 Schematic Diagram of Voltage and Current Connection

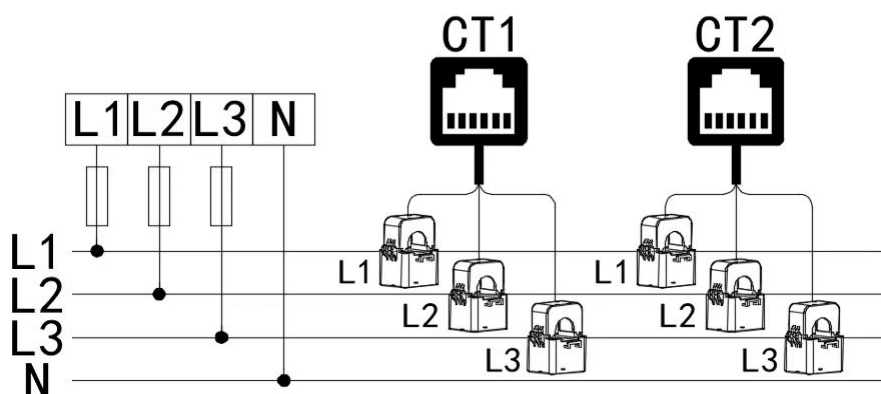

注:

- ① 单相电表只需要接 A 相;
- ② **ADL400N-CT/D16-1** 只需要接 CT1;
- ③ 出于安全考虑，在电压输入端需接入额定电流 5A 的保险丝。

Note:

- ① Only connect Phase A to the single-phase electric meter;
- ② Only connect CT1 to **ADL400N-CT/D16-1**;
- ③ For safety reasons, a fuse with a rated current of 5A needs to be connected to the voltage input terminal.



警告

- 使用额定电压 500V 的铜线
- 连接到现场接线端子的电缆的最低承受温度为 80° C

不遵守以上说明可能会导致死亡、严重伤害和设备损坏



WARNING

- Use copper wire rated for 500V.
- Minimum temperature rating of the cable to be connected to the field wiring terminals, 80 °C.

Failure to follow these instructions can result in death, serious injury, or equipment damage.



AVERTISSEMENT

- Utilisez un fil de cuivre évalué pour 500V.
- Température nominale minimale du câble à connecter aux bornes de câblage sur le terrain, 80 ° C.

Le non-respect de ces instructions peut entraîner la mort, des blessures graves ou des dommages à l' équipement.

注:

Note:

1.出于安全考虑, 在电压输入端需接入额定电流 5A 的保险丝;


1.For safety reasons,a fuse with a rated current of 5A needs to be connected to the voltage input terminal;

2.接线之前确保设备处于断电状态;

2.Verify that power is OFF before making connections;

7.2 通讯端子

7.2 Communication Terminal

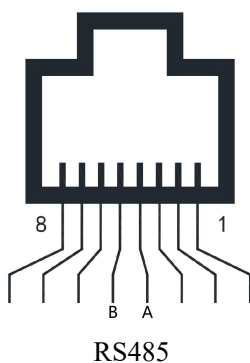

8 主要功能特点

8 Main Functional Features

8.1 测量功能

8.1 Measurement Function

仪表能测量全电力参数包括电压 U、电流 I、有功功率 P、无功功率 Q、视在功率 S、功率因数 PF、频率、

正向有功电能，反向有功电能，正向无功电能，反向无功电能。

It can measure total power parameters including voltage U, current I, active power P, reactive power Q, apparent power S, power factor PF, frequency, forward active electric energy, reverse active electric energy, forward reactive electric energy and reverse reactive electric energy.

8.2 计量功能

8.2 Metering Function

能计量当前组合有功电能，正向有功电能，反向有功电能，正向无功电能，反向无功电能。

It can measure the current combined active electric energy, forward active electric energy, reverse active electric energy, forward reactive electric energy and reverse reactive electric energy.

9 显示

9 Display

9.1 指示灯说明

9.1 Indicator light description

指示灯名称 Indicator name	说明 illustrate
RUN	运行指示灯，正常运行时按 1HZ 频率闪烁 Operation indicator light flashes at 1HZ frequency during normal operation
COM	正常通讯时闪烁 Flashes during normal communication
E	脉冲指示灯，如脉冲常数是 600 时，每个脉冲表示 1/600kwh 电量 Pulse indicator light, if the pulse constant is 600, each pulse represents 1/600kwh of electricity

10 通信说明

10 Communication Instructions

仪表 RS485 通信接口支持 MODBUS-RTU 通信协议,通信口波特率可在 1200bps、2400 bps、4800 bps、9600bps、19200 bps 和 38400 bps 之间设置，校验位为无校验。

The instrument RS485 communication interface supports MODBUS-RTU communication protocol. The baud rate of communication interface can be set between 1,200bps, 2,400 bps, 4,800 bps, 9,600bps, 19,200 bps and 38,400 bps, and the check bit is no check.

仪表的 RS485 通信口要求使用屏蔽双绞线连接，布线时要考虑整个网络的布局：如通信线缆的长度、走向、上位机的位置、网络末端的匹配电阻、通信转换器、网络可扩展性、网络覆盖范围、环境的电磁干扰情况等因素，都要综合考虑。

The RS485 communication interface of the instrument requires shielded twisted pair connection, and the layout of the whole grid should be considered when wiring: For example, the length and direction of communication cable, the position of upper computer, the matching resistance at the end of the grid, the communication converter, the scalability of the grid, the coverage of the grid, the electromagnetic interference of the environment and other factors should be considered comprehensively.

注：

Note:

1、在布线工程上要严格按照要求施工；

1. It shall strictly construct according to the requirements in the wiring project;

2、对于暂时不需要通信的仪表都要将他们连接到 RS-485 网络上，以便于诊断和测试；

2. For instruments that do not need communication temporarily, they should be connected to RS-485 grid for diagnosis and test;

3、进行 RS-485 电缆连接时，尽量使用双色双绞线，所有的 485 通信口“A”端接同一种颜色，“B”端接另一种颜色。

3. When connecting RS-485 cable, try to use two-color twisted pair. All 485 communication ports "A" are terminated in the same color, and "B" is terminated in another color.

4、RS-485 总线(从上位机通信口开始到任一被连接的仪表终端通信口)长不超过 1000 米。

4. The length of RS-485 bus (from the communication interface of the upper computer to any connected instrument terminal communication interface) shall not exceed 1,000 meters.

10.1 地址表

10.1 Address Table

仪表支持 MODBUS-RTU 协议中的 03H 命令与 10H 命令，03H 为读多个寄存器，10H 为写多个寄存器，协议数据格式请自行查询。下表为仪表的寄存器地址表：

Meter supports 03H command and 10H command in MODBUS-RTU protocol, in which 03H for reading multiple registers and 10H for writing multiple registers. Please check the protocol data format by yourself. The following table is the register address table of the meter:

表 8 通讯地址表

Table 8 Communication Address Table

地址 Address	名称 Name	R/W	字长 Length (Bytes)	类型 Type	单位 Unit	备注 Note
0000H	地址 slave address	R/W	1	uint16		1-247
000BH	特征码 feature code	R	1	uint16		高字节固定为 0xAC 低字节表示电表类型，如下： 0x01：单路 CT-单相电表； 0x02：单路 CT-三相电表； 0x03：双路 CT-单相电表； 0x04：双路 CT-三相电表； The high byte is fixed as 0xAC. The low byte represents the type of electric meter, as follows: 0x01: Single-channel CT - Single-phase electric meter; 0x02: Single-channel CT - Three-phase electric meter; 0x03: Dual-channel CT - Single-phase electric meter; 0x04: Dual-channel CT -

						Three-phase electric meter.
000CH	第一路相序检测结果 the phase - sequence detection result of the first channel	R	1	uint16		高八位（互感器极性）： the upper 8-bits (polarity of the mutual inductor) bit8:A 相 Phase A bit9:B 相 Phase B bit10:C 相 Phase C 为 1 表示极性相反 1 indicates that the polarity is reversed 低八位（相序）： the lower 8-bits (Phase sequence): 0: ABC 1: BAC 2: ACB 3: CBA 4: CAB 5: BCA
000DH	第一路相序调整 phase sequence adjustment of the first channel.	R/W	1	uint16		0: ABC 1: BAC 2: ACB 3: CBA 4: CAB 5: BCA
000EH	第一路互感器极性调整 polarity adjustment of the current transformer of the first channel	R/W	1	uint16		bit0:A 相 Phase A Bit1:B 相 Phase B Bit2:C 相 Phase C
000FH	第二路相序检测结果 the phase - sequence detection result of the second channel	R	1	uint16		高八位（互感器极性）： the upper 8-bits (polarity of the mutual inductor) bit8:A 相 Phase A bit9:B 相 Phase B bit10:C 相 Phase C 为 1 表示极性相反 1 indicates that the polarity is reversed 低八位（相序）： the lower 8-bits (Phase sequence): 0: ABC 1: BAC 2: ACB 3: CBA 4: CAB 5: BCA

0010H	第二路相序调整 the phase - sequence detection result of the second channel	R/W	1	uint16		0: ABC 1: BAC 2: ACB 3: CBA 4: CAB 5: BCA
0011H	第二路互感器极性调整 phase sequence adjustment of the second channel	R/W	1	uint16		bit0:A 相 Phase A Bit1:B 相 Phase B Bit2:C 相 Phase C
1000H	地址 slave address	R/W	1	uint16		1-247
1001H	波特率 baud rate	R/W	1	uint16		1200, 2400, 4800, 9600, 19200, 38400,
1002H	校验位 parity	R/W	1	uint16		低字节 lower byte 0: 无校验 None 1: 奇校验 Odd 2: 偶校验 Even 高字节 higher byte 0: 1 停止位 1stop 1: 2 停止位 2stop
1009H	序列号 SnNum	R/W	7	uint16		ASCII
2100H	A 相电压 A-phase voltage	R	2	float	V	第一路电参量数据
2102H	B 相电压 B-phase voltage	R	2	float	V	
2104H	C 相电压 C-phase voltage	R	2	float	V	
2106H	AB 线电压 AB-line voltage	R	2	float	V	
2108H	BC 线电压 BC-line voltage	R	2	float	V	
210AH	CA 线电压 CA-line voltage	R	2	float	V	
210CH	A 相电流 A-phase current	R	2	float	A	
210EH	B 相电流 B-phase current	R	2	float	A	
2110H	C 相电流 C-phase current	R	2	float	A	
2112H	N 线电流 N-phase current	R	2	float	A	
2114H	A 相有功功率 A-phase active power	R	2	float	W	
2116H	B 相有功功率 B-phase active power	R	2	float	W	
2118H	C 相有功功率 C-phase active power	R	2	float	W	
211AH	总有功功率 Total active power	R	2	float	W	
211CH	A 相无功功率 A-phase reactive power	R	2	float	Var	
211EH	B 相无功功率 B-phase reactive power	R	2	float	Var	
2120H	C 相无功功率	R	2	float	Var	

	C-phase reactive power					
2122H	总无功功率 total reactive power	R	2	float	Var	
2124H	A 相视在功率 A-phase apparent power	R	2	float	VA	
2126H	B 相视在功率 B-phase apparent power	R	2	float	VA	
2128H	C 相视在功率 C-phase apparent power	R	2	float	VA	
212AH	总视在功率 Total apparent power	R	2	float	VA	
212CH	A 相功率因数 A-phase power factor	R	2	float		
212EH	B 相功率因数 B-phase power factor	R	2	float		
2130H	C 相功率因数 C-phase power factor	R	2	float		
2132H	总功率因数 Total power factor	R	2	float		
2134H	频率 Frequency	R	2	float	Hz	
2300H	A 相电压 A-phase voltage	R	2	float	V	第二路电参量数据
2302H	B 相电压 B-phase voltage	R	2	float	V	
2304H	C 相电压 C-phase voltage	R	2	float	V	
2306H	AB 线电压 AB-line voltage	R	2	float	V	
2308H	BC 线电压 BC-line voltage	R	2	float	V	
230AH	CA 线电压 CA-line voltage	R	2	float	V	
230CH	A 相电流 A-phase current	R	2	float	A	
230EH	B 相电流 B-phase current	R	2	float	A	
2310H	C 相电流 C-phase current	R	2	float	A	
2312H	N 线电流 N-phase current	R	2	float	A	
2314H	A 相有功功率 A-phase active power	R	2	float	W	
2316H	B 相有功功率 B-phase active power	R	2	float	W	
2318H	C 相有功功率 C-phase active power	R	2	float	W	
231AH	总有功功率 Total active power	R	2	float	W	
231CH	A 相无功功率 A-phase reactive power	R	2	float	Var	
231EH	B 相无功功率 B-phase reactive power	R	2	float	Var	

2320H	C 相无功功率 C-phase reactive power	R	2	float	Var	
2322H	总无功功率 total reactive power	R	2	float	Var	
2324H	A 相视在功率 A-phase apparent power	R	2	float	VA	
2326H	B 相视在功率 B-phase apparent power	R	2	float	VA	
2328H	C 相视在功率 C-phase apparent power	R	2	float	VA	
232AH	总视在功率 Total apparent power	R	2	float	VA	
232CH	A 相功率因数 A-phase power factor	R	2	float		
232EH	B 相功率因数 B-phase power factor	R	2	float		
2330H	C 相功率因数 C-phase power factor	R	2	float		
2332H	总功率因数 Total power factor	R	2	float		
2334H	频率 Frequency	R	2	float	Hz	
3000H	总有功电能一次值 active electric energy	R	4	double	kWh	第一路电能
3004H	正向有功电能一次值 forward active electric energy	R	4	double	kWh	
3008H	反向电能一次值 reverse active electric energy	R	4	double	kWh	
300CH	总无功电能一次值 reactive electric energy	R	4	double	kVarh	
3010H	正向无功电能一次值 forward reactive electric energy	R	4	double	kVarh	
3014H	反向无功电能一次值 reverse reactive electric energy	R	4	double	kVarh	
3018H	视在电能一次值 apparent electric energy	R	4	double	kVAh	
301CH	A 相总有功电能一次值 active electric energy of phase A	R	4	double	kWh	
3020H	A 相正向有功电能一次值 forward active electric energy of phase A	R	4	double	kWh	
3024H	A 相反向有功电能一次值	R	4	double	kWh	

	reverse active electric energy of phase A					
3028H	A 相无功电能一次值 reactive electric energy of phase A	R	4	double	kVarh	
302CH	A 相正向无功电能一次值 forward reactive electric energy of phase A	R	4	double	kVarh	
3030H	A 相反向无功电能一次值 reverse reactive electric energy of phase A	R	4	double	kVarh	
3034H	B 相总有功电能一次值 active electric energy of phase B	R	4	double	kWh	
3038H	B 相正向有功电能一次值 forward active electric energy of phase B	R	4	double	kWh	
303CH	B 相反向有功电能一次值 reverse active electric energy of phase B	R	4	double	kWh	
3040H	B 相无功电能一次值 reactive electric energy of phase B	R	4	double	kVarh	
3044H	B 相正向无功电能一次值 forward reactive electric energy of phase B	R	4	double	kVarh	
3048H	B 相反向无功电能一次值 reverse reactive electric energy of phase B	R	4	double	kVarh	
304CH	C 相总有功电能一次值 active electric energy of phase C	R	4	double	kWh	
3050H	C 相正向有功电能一次值 forward active electric energy of phase C	R	4	double	kWh	
3054H	C 相反向有功电能一次值 reverse active electric energy of phase C	R	4	double	kWh	
3058H	C 相无功电能一次值 reactive electric energy of phase C	R	4	double	kVarh	
305CH	C 相正向无功电能一次值 forward reactive electric energy	R	4	double	kVarh	

	of phase C					
3060H	C 相反向无功电能一次值 reverse reactive electric energy of phase C	R	4	double	kVarh	
3100H	总有功电能一次值 active electric energy	R	4	double	kWh	第二路电能
3104H	正向有功电能一次值 forward active electric energy	R	4	double	kWh	
3108H	反向电能一次值 reverse active electric energy	R	4	double	kWh	
310CH	总无功电能一次值 reactive electric energy	R	4	double	kVarh	
3110H	正向无功电能一次值 forward reactive electric energy	R	4	double	kVarh	
3114H	反向无功电能一次值 reverse reactive electric energy	R	4	double	kVarh	
3018H	视在电能一次值 apparent electric energy	R	4	double	kVAh	
311CH	A 相总有功电能一次值 active electric energy of phase A	R	4	double	kWh	
3120H	A 相正向有功电能一次值 forward active electric energy of phase A	R	4	double	kWh	
3124H	A 相反向有功电能一次值 reverse active electric energy of phase A	R	4	double	kWh	
3128H	A 相无功电能一次值 reactive electric energy of phase A	R	4	double	kVarh	
312CH	A 相正向无功电能一次值 forward reactive electric energy of phase A	R	4	double	kVarh	
3130H	A 相反向无功电能一次值 reverse reactive electric energy of phase A	R	4	double	kVarh	
3134H	B 相总有功电能一次值 active electric energy of phase B	R	4	double	kWh	
3138H	B 相正向有功电能一次值 forward active electric energy of phase B	R	4	double	kWh	

313CH	B 相反向有功电能一次值 reverse active electric energy of phase B	R	4	double	kWh
3140H	B 相无功电能一次值 reactive electric energy of phase B	R	4	double	kVarh
3144H	B 相正向无功电能一次值 forward reactive electric energy of phase B	R	4	double	kVarh
3148H	B 相反向无功电能一次值 reverse reactive electric energy of phase B	R	4	double	kVarh
314CH	C 相总有功电能一次值 active electric energy of phase C	R	4	double	kWh
3150H	C 相正向有功电能一次值 forward active electric energy of phase C	R	4	double	kWh
3154H	C 相反向有功电能一次值 reverse active electric energy of phase C	R	4	double	kWh
3158H	C 相无功电能一次值 reactive electric energy of phase C	R	4	double	kVarh
315CH	C 相正向无功电能一次值 forward reactive electric energy of phase C	R	4	double	kVarh
3160H	C 相反向无功电能一次值 reverse reactive electric energy of phase C	R	4	double	kVarh

11 常见故障分析

11 Common Fault Analysis

11.1 显示故障（电压电流功率显示异常）

11.1 Display Fault (Abnormal Voltage, Current, and Power Indications)

(1)检查：实际接线与接线图的要求是否相同，注意电压线序是否正确，电流互感器的套线方向和相序是否正确；

(1) Inspection: Check whether the actual wiring is the same as the requirements of the wiring diagram, pay attention to whether the voltage wiring order is correct, and whether the direction of the current transformer's secondary winding and phase sequence are correct.

(2)测量：若接线没有问题，采用万用表通断测试档对产生问题所相关的外部线路接线进行测量，查看外部线路的端子与仪表端子之间是否导通。

(2) Measurement: If the wiring is correct, use a multimeter in continuity test mode to measure the external circuit connections related to the problem. Check for continuity between the terminals of the external circuit and the instrument terminals.

注意：在查看电流和电压线路时，一定要确保信号电流和电压处于断开状态，保证人身安全。

Note: When inspecting current and voltage circuits, ensure that the signal current and voltage are disconnected to ensure personal safety.

11.2 通讯故障

11.2 Communication Fault

(1)检查：查看仪表的通信设置信息如通信地址、波特率、校验方式与上位机的设置是否一致。

(1) Inspection: Verify that the communication settings of the instrument, such as the communication address, baud rate, and parity check, match the settings of the master device.

(2)检查：检查通讯接线是否正确，A、B 是否接反。

(2) Check if the communication wiring is correct and if A and B are connected incorrectly.

12 运输与贮存

12 Transportation and Storage

仪表的包装宜采用符合环保要求的材料，仪表及附件在包装条件下应贮存在通风干燥处，避免受潮和腐蚀气体的侵蚀，贮存的极限环境温度为 $-40^{\circ}\text{C} \sim +80^{\circ}\text{C}$ ，相对湿度不超过 75%。

The packaging of the instrument should use environmentally friendly materials. The instrument and its accessories, when packaged, should be stored in a ventilated and dry place to avoid moisture and corrosion by gases. The storage temperature should be between -40°C and $+80^{\circ}\text{C}$, with a relative humidity not exceeding 75%.

13.保修与服务

13. Warranty and Service

制造厂对产品质量实行三包，仪表自出厂之日起 24 个月内，用户在完全遵守本说明书的规定的使用条件下，使用时发现仪表损坏，由本公司负责免费修理或更换。

The manufacturer offers a triple guarantee on product quality. Within 24 months from the date of manufacture, if the user fully complies with the usage conditions specified in this manual and finds the instrument damaged during use, our company will be responsible for repairing or replacing it free of charge.

Headquarters:AcrelCo.,LTD.
Address:No.253YulvRoadJiadingDistrict,Shanghai, China
TEL.:+8617821101655
Web-site:www.acrel-group.com
E-mail:Lynn@acrel-electric.com
Postcode:201801